



Advantech SOP: Installing OS and Installation and Deployment of DeviceOn Servers and Clients

By Jiya Patel

Purpose: To set up DeviceOn Servers and Clients in Windows and Ubuntu.

You may need to install the OS in a new PC before you can install DeviceOn Server or DeviceOn Client.

- **To install Ubuntu**, follow this site: <https://ubuntu.com/tutorials/install-ubuntu-desktop>


Tips:

1. Before installing Ubuntu, make sure your SSD is big enough to install DeviceOn. You will need at least 50GB, and 100GB is recommended.

The SSD I used for my Linux DeviceOn Server:



2. You can start from step 4 on the site shared above, since we already have the bootable USB stick in the office.

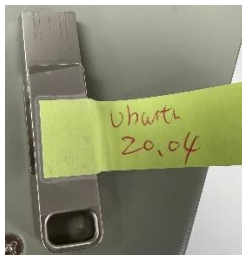

3. When you get to step 6, "Erase disk and install Ubuntu".
4. You can stop following the tutorial after step 10, after you have restarted the computer and you get the home screen.

- **To install Windows**, I could not find a website to follow, but here are the steps I took:
 1. Get the SSD card from Takeuchi-San. Insert it.
 2. Get the USB from Takeuchi-San and the Windows OS image for your Advantech PC from Motokura-San.

3. Copy the image to the USB, attach the USB to the PC, and boot up. (For Advantech PCs, use the Delete key to get the setup page.)
4. Go to the Boot section after clicking Delete as soon as you hear the sound when the PC turns on. You may need to change the Boot option to UEFI. Then, Save & Exit. The second option can be to click F7 after turning the PC on and choose UEFI as the boot-up device.
5. Windows PE command prompt will come up. Execute Ghost64.exe. You may need to find the drive it is in (in my case, it was in Drive D).
6. A screen will pop up where you will have to select the source and destination of the image. I selected the default options.
7. After the process is complete, reboot, and choose user settings (username, password, etc).

For Installation and Deployment of DeviceOn Servers and Clients:

Follow the site: https://docs.wise-paas.advantech.com/en/Guides_and_API_References/1621244050073129071/1564727799415968385/1564727878040194797/v1.0.2

Click the “Installation and Deployment” option on the menu on the left-hand side. Then click “Server on Windows”, “Server on Ubuntu”, “Agent Installation & Onboarding (Windows)”, or “Agent Installation & Onboarding (Linux)” depending on what you want.

Tips:

1. You will need a power cable, Ethernet/Wi-Fi, keyboard, mouse, and a USB.
2. IP addresses of servers and clients must be from the same subnet (example: 192.168.0.**). So, all Ethernet cables for all servers/clients must be from the same router.
3. For Linux, the DeviceOn icon may not come up on the Home Screen, but you can use the link you get on the terminal after installation and open the webpage for DeviceOn login.